

# ATS - 1.0A User Manual

( )

TEL : 02 - 522 - 3633

FAX : 02 - 522 - 5620

⋮

⋮

- 1.
2. Specifications
- 3.



## 2. Specifications

<b>Input</b>		<b>Output VSWR</b>	< 1.2 at 1 MHz
Frequency	10 MHz ? 100KHz	<b>Distortion</b>	< -25 dBc
Type	Insulated BNC Transformer Coupled	<b>General</b>	
Level	50mVpp to 5Vpp	<b>Power</b>	110 - 230 VAC
VSWR	<1.2 at 10MHz		3W @ 50 / 60Hz
<b>Output</b>		<b>Dimensions</b>	17.63 "X 12.04 "X 1.69 "
Type	12 Local Grounded BNCs	<b>Weight</b>	5.62 lbs.
Level	1Vpp into 50 $\Omega$ , ? 10% 2Vpp into 10 K $\Omega$ , ? 10%		

## 3.

- |                          |           |          |   |
|--------------------------|-----------|----------|---|
| 1) GPS, Rubidium, Cesium | 10MHz     | ATS-1.0A | . |
| 2)                       | S/W       | ON       | . |
| 3) Front Panel           | LED       | /        | . |
| 4)                       | BNC Cable | 10 MHz   | . |