
# Oscilloscope Probes and Accessories



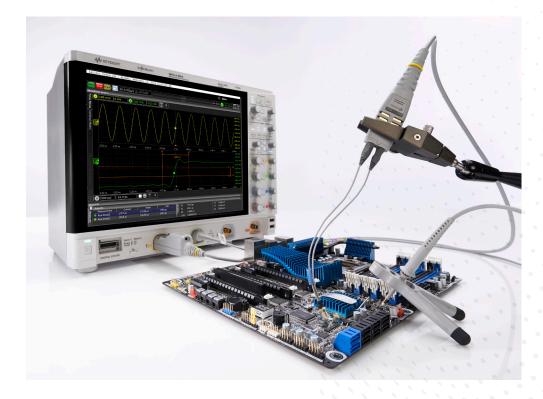



SELECTION GUIDE


# Introduction

To get the most out of your oscilloscope, you need the right probes and accessories for your particular applications. Whether you need the high bandwidth and low loading of an active probe, an easy way to connect to surface mount ICs or a passive probe to measure high voltages, there are a wide selection of high-quality probes and accessories for your Keysight Technologies, Inc. oscilloscope.




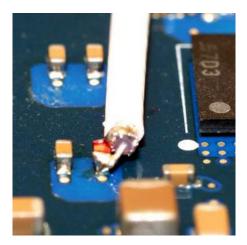

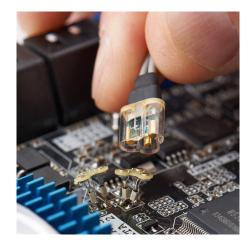

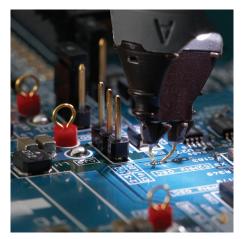



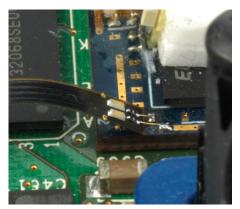

### How To Select A Probe

Selecting the correct probe for your oscilloscope measurement should not be difficult. This brochure provides suggestions on how to make the best decision. Following is a list of probe parameters you need to consider when you select a probe for a given measurement.

#### Attenuation

Choose the attenuation ratio of the probe (1:1, 10:1, 100:1, 1000:1) to match the test signal amplitude to the oscilloscope's vertical sensitivity range. Higher attenuation probe allows the measurement range of a scopetobe extended, and lower attenuation probe allows for lower noise measurement.

#### Bandwidth (BW)

The probe's rated bandwidth should match the oscilloscope's and be adequate for the test signal. However, at higher frequencies, grounded lead inductance and input capacitance often influence system performance more than probe bandwidth.

#### Input resistance (Rin)

Input impedance is used to describe the loading effects of a probe. At DC and low frequency ranges, the probe's resistive component is the main factor that loads down the circuit under test. However, as the frequency goes up, the capacitance of the probe tip, in parallel with the DC resistance, starts to reduce the input impedance of the probe, resulting in greater loading and a more adverse effect to the target.

#### Input capacitance (Cin)

Excessive input capacitance (sometimes called tip capacitance) slows down the system's pulse response. Usually the least input capacitance possible is best.

The effects of passive probe compensation:

#### Maximum input voltage (Vmax)

To ensure user safety, help protect the oscilloscope input from destructive voltage, and avoid damage to the probe, select a probe that is rated for a higher voltage than the signal you intend to test.

#### Probe compensation range

Most passive probes have a specification that lists the oscilloscope input capacitance range over which they can be used. When choosing a passive probe, be sure that the oscilloscope's input capacitance lies within the probe's compensation range or you will not be able to adjust the probe to achieve a correctly compensated square wave signal.

#### Probe output termination

Most oscilloscopes have  $1-M\Omega$  and/or 50  $\Omega$  input resistance. For proper signal transfer and optimum signal integrity, it's important that the probe's R and C match the R and C of the oscilloscope it is to be used with. For example, 50  $\Omega$  terminated probes should be used with 50  $\Omega$  scope inputs. Similarly, 1 M $\Omega$  terminated probes should be used on scopes with a 1 M $\Omega$ input resistance.

#### Probe interface

Most Keysight oscilloscope probes offer either a BNC type of probe interface or the AutoProbe interface. The AutoProbe interface is an intelligent communication and power link between compatible probes and the Infiniium or InfiniiVision Series oscilloscopes. The AutoProbe identifies the type of probe attached and sets up the proper input impedance, attenuation ratio, probe power, and offset range as needed.

### Probe tip form factor


Your probe must make a reliable connection to the test point, and you may want it to grab the test point. Generally, this requires a small and light probe and a tip or grabber that is compatible with the test point. SMT and fine-pitch geometries make this issue especially critical.

#### Single-ended, Differential or InfiniiMode Probe


Two most common voltage probe types are single-ended and differential probe.

Differential probes measure the voltage difference between any two input points in contrast to a single-ended probe, which measures input voltage relative to ground. Differential probes are especially popular for measuring high-frequency signals or signals where neither are referenced to ground. Differential probes use a differential amplifier to convert the difference between two signals into a voltage that can be sent to a typical single-ended scope input.


A differential probe can be used to make single-ended measurements by using its negative input as a ground reference contact and there are several advantages to using a differential probe to make single-ended measurement. New InfiniiMode probes offer multiple modes that can measure single-ended, differential, and common-mode characteristics of a differential signal with a signal connection.

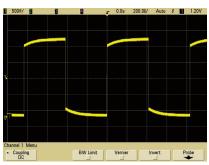

Under-compensated

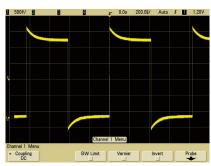

Over-compensated

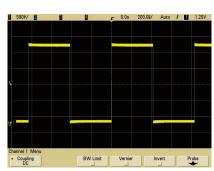

Properly compensated

## Types of Probes

### Passive probes

The most widely used type of oscilloscope probe is the "passive probe." Passive probes are also the most rugged and economical. There are no active components such as transistors or amplifiers in the probe, and therefore passive probes do not need to be powered.



### Passive probes classifications

	1:1 high Z passive probe	10:1 or 20:1 high Z passive probe	100:1 high Z passive probe	Resistive divider passive probe
Features	A low capacitance coax cable with a BNC connector on one end and a probe on the other	<ul> <li>The most widely used scope probe type; provided standard with most &lt; 1-GHz oscilloscopes</li> <li>Gives lower input capacitance and higher bandwidth than the 1:1 probe</li> </ul>	<ul> <li>Additional attenuation for use with higher- amplitude signals</li> <li>Large attenuation requires a high-gain amplifier on the scope</li> </ul>	<ul> <li>Highest-bandwidth passive probe for measuring high- frequency, low- impedance circuit</li> <li>Must be used with an oscilloscope's 50-Ω input</li> </ul>
When to use	For viewing small signals (< 1 V)	For viewing up to ~300 V	For viewing up to 4 kV high voltage	High-frequency, low- impedance (< 50 Ω) digital circuit, transmission line
When not to use	For probing high-frequency signal	For achieving > 700 MHz system bandwidth	For making floating (ungrounded) measurement	For probing high-amplitude, high-impedance signal
Typical bandwidth	Up to 35 MHz	Up to 600 MHz	Up to 500 MHz	Up to 1.5 GHz
Keysight models	N2870A,10070D, N2889A, N2140A/42A (1:1/10:1)	N2871/2/3/5A, 10073D, 10074D, 1165A, N2862B/63B/89A/90A, N2840A/41A/42A/43A/53A N2894A, N7007A	10076C	N2874/6A

### Passive probes (Continued)

### Passive probe characteristics

Model	Cable length	Attenuation	Typical probe bandwidth	Compensates oscilloscope input	Max input voltage	Recommended oscilloscopes
10070D	1.5 m	1:1	20 MHz	1 ΜΩ	400 V CAT II	1000, 3000, 2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 9000, S-Series
N2870A	1.3 m	1:1	35 MHz	1 ΜΩ	55 V CAT II	1000, 3000, 2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, S-Series
N2142A	1.2 m	1:1/10:1	75 MHz	1 MΩ, 15-40 p	300 V at 10:1, 150 V at 1:1 CAT II	1000 X
N2140A	1.2 m	1:1/10:1	200 MHz	1 MΩ, 15-40 p	300 V at 10:1, 150 V at 1:1 CAT II	1000 X
N2889A	1.3 m	1:1,10:1	350 MHz	1 MΩ, 5-30 pF	300 V CAT II	1000, 3000, 2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, S-Series
10073D	1.5 m	10:1	500 MHz	1 MΩ, 6-15 pF	400 V CAT II	5000 Series (500 MHz) 6000 (300 MHz to 1 GHz), 7000, 5464x, 54830, 8000 Series
10074C	1.5 m	10:1	150 MHz	1 MΩ, 9-17 pF	400 V CAT II	6000 Series (100 MHz), 5462x
N2862B / N2841A	1.2 m	10:1	150 MHz	1 MΩ, 5-30 pF	300 V CAT II	1000, 3000, 2000 X, 3000 X-Series
N2863B / N2842A	1.2 m	10:1	300 MHz	1 MΩ, 5-30 pF	300 V CAT II	1000, 3000, 2000 X, 3000 X, 5000 Series (100, 300 MHz)
N2871A	1.3 m	10:1	200 MHz	1 MΩ, 10-25 pF	300 V CAT II	2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, 54600, S-Series
N2872A	1.3 m	10:1	350 MHz	1 MΩ, 10-25 pF	300 V CAT II	2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, 54600, S-Series
N7007A	2 m	10:1	400 MHz	1 MΩ, 8-16 pF	1 kV CAT II, 600 V CAT III	2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, 54600, S-Series
N2873A	1.3 m	10:1	500 MHz	1 MΩ, 10-25 pF	300 V CAT II	2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, 54600, S-Series
N2890A / N2843A	1.3 m	10:1	500 MHz	1 MΩ, 5-30 pF	300 V CAT II	1000, 3000, 2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, S-Series
1165A	1.5 m	10:1	600 MHz	1 MΩ, 12-14 pF	300 V CAT II	54830, 6000, 7000, 8000, 9000 Series
N2894A <sup>1</sup>	1.3 m	10:1	700 MHz	1 MΩ, 10-25 pF	300 V CAT II	4000 X and 6000 X
N2874A	1.3 m	10:1	1.5 GHz	50 Ω	8.5 V CAT I	4000 X, 6000 X and all Infiniium Series
N2875A	1.3 m	20:1	500 MHz	1 MΩ, 7-20 pF	300 V CAT II	1000, 3000, 2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, 54600 Series
N2876A	1.3 m	100:1	1.5 GHz	50 Ω	21 V mains isolated	4000 X, 6000 X, and all Infiniium Series
54006A	1.2 m	10:1 (500 Ω) or 20:1 (1 kΩ)	6 GHz	50 Ω	20 Vpk	S-Series, 80000, 90000, 5484x, 5485x, 90000X/Q with N5442A
10076C	1.5 m	100:1	500 MHz	1 MΩ, 7-20 pF	3.7 kV pk mains isolated, 1 kV pk CAT II	1000, 3000, 1000 X, 2000 X, 3000 X, 4000 X, 6000 X, 5000, 6000, 7000, 8000, 9000, S-Series

1. The N2894A provides 700 MHz system bandwidth with the 4000X and 6000X Series 1 GHz or higher bandwidth models only.



Low-inductive ground connection for N287xA probes keeps the probe loading low to achieve high signal integrity measurements



The replaceable probe tip on the N287xA probes saves you money

### Single-ended active probes

Active probes contain a small, active amplifier built into the probe body near the probe tip. This arrangement makes it possible to keep the probe input capacitance very low, usually less than 2 pF. This low capacitance results in high input impedance on high frequencies. It has the best overall combination of resistive and capacitive loading. With such low loading, active probes can be used on high-impedance circuits that would be seriously loaded by passive probes. Active probes are the least intrusive of all the probes.



### Single-ended active probe characteristics

Model	Attenuation	Probe bandwidth	Input dynamic range	Applications and use	Oscilloscope compatibility
N2795A	10:1	1 GHz	0 to ± 8 V	General-purpose, high-speed probing in	50- $\Omega$ AutoProbe interface input
N2796A	10:1	2 GHz	0 to ± 8 V	digital and analog system design	
N2797A	10:1	1.5 GHz	0 to ± 8 V	Extreme temperature probing at -40 to	-
				+85 °C	
N7020A	1.1:1	2 GHz	0 to ± 850 mV	General purpose power integrity	3000T/4000X/6000X/S-Series/
				measurement of DC power rails	9000
N7024A	1.3:1	6 GHz	0 to ± 600 mV	Power integrity measurement in	S, 90000X, V, Z and Q Series
				high speed systems using Infiniium	(requires N5442A with AutoProbe II
				oscilloscope	interface scopes)

#### Single-ended active probe advantages

Timing and voltage measurements are more accurate at high bandwidths Active probes are the least intrusive to circuits under test Limitations Active probes are more expensive than general-purpose passive probes Active probes have lower dynamic range, lower maximum voltage and are less rugged than passive probes



N7020A 2 GHz power rail probe



N7024A 6 GHz power rail probe



N2795A/N2796A 1/2-GHz active probe with AutoProbe interface, head light, and 1 M $\Omega$  input Z




N2795A/96A comes with a headlight for better visibility while probing

### Differential active probes

A "differential" probe is an active probe that has two inputs, one positive and one negative, as well as a separate ground lead. It drives a single-terminated  $50-\Omega$  cable to transmit its output to one oscilloscope channel. The output signal is proportional to the difference between the voltages appearing at the two inputs. A differential probe is used to look at signals that are referenced to each other instead of earth ground and to look at small signals in the presence of large DC offsets or other common mode signals such as power line noise.

### Differential active probe characteristics

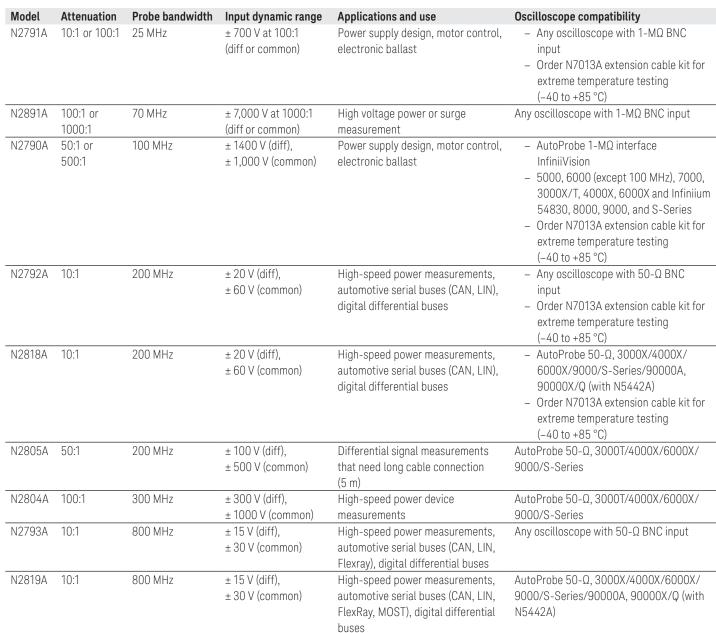



### Differential active probes (Continued)

### InfiniiMax single-ended and differential probes characteristics

	Ŭ		•			
Model	Attenuation	Probe bandwidth	Input dynamic range	Applications and use	Recommended oscilloscopes	
1130B <sup>1</sup>	10:1	1.5 GHz	5 V single ended, ± 2.5 V differential	<ul> <li>Measure fast transitions on low-voltage differential or single-ended signals</li> </ul>	3000 X/T, 4000X, 6000X, 5000, 6000 (300 MHz to 1 GHz), 7000, 8000, 9000, S-Series 1 GHz or below	
1131B <sup>1</sup>	10:1	3.5 GHz	5 V single ended, ± 2.5 V differential	<ul> <li>Full-bandwidth probing system for InfiniiVision <sup>4</sup> and Infiniium Series</li> <li>Requires one or more probe head</li> </ul>	<ul> <li>Full-bandwidth probing system for InfiniiVision <sup>4</sup> and Infiniium Series</li> <li>DS0/MS09254A, I DS080204B, 8030</li> </ul>	DSO/MS09254A, DS09204H, DS080204B, 80304B, 90254A, S-Series
1132B <sup>1</sup>	10:1	5 GHz	5 V single ended, ± 2.5 V differential	– accessory per amplifier – InfiniiMode (differential, SE	DSO/MS09404A, DS080404B, 90404A, S-Series	
1134B <sup>1</sup>	10:1	7 GHz	5 V single ended, ± 2.5 V differential	– and CM) with InfiniiMax III + N2830A/31A/32A, and	DS080604B, 90604A, S-Series	
1168B <sup>1, 2</sup>	3.45:1	10 GHz	3.3 V single ended, ± 1.65 V differential	– N7000A/01A/02A/03A – Probe interface	DS080804B, 81004B, 90804A	
1169B <sup>1, 2</sup>	3.45:1	13 GHz	3.3 V single ended, ± 1.65 V differential	<ul> <li>InfiniiMax 1130B-34B,</li> <li>1168B/69B, N2830A-32A:</li> <li>AutoProbe   interface</li> <li>InfiniiMax N7000A-03A,</li> </ul>	DS081204B, 81304B, 91204A, 91304A	
N2830A <sup>1, 2, 3</sup>	5:1/10:1	4 GHz	5 Vpp, ± 2.5 V		S-Series, 90000A	
N2831A <sup>1, 2, 3</sup>	5:1/10:1	8 GHz	5 Vpp, ± 2.5 V		S-Series, 90000A	
N2832A <sup>1, 2, 3</sup>	5:1/10:1	13 GHz	5 Vpp, ± 2.5 V	N2801A-N2803A: AutoProbe	S-Series, 90000A	
N7000A	5:1/10:1	8 GHz	5 Vpp, ± 2.5 V	Il interface	Infiniium S, V, 90000X	
N7001A	5:1/10:1	13 GHz	5 Vpp, ± 2.5 V	_	Infiniium V, 90000X	
N7002A	5:1/10:1	16 GHz	5 Vpp, ± 2.5 V		Infiniium V, 90000X	
N7003A	5:1/10:1	20 GHz	5 Vpp, ± 2.5 V	_	Infiniium V, 90000X	
N2801A <sup>1, 2, 3</sup>	6:1	20 GHz	1.6 Vpp, ± 0.8 V	_	Infiniium V, 90000X/Q 20 GHz models	
N2802A <sup>1, 2, 3</sup>	6:1	25 GHz	1.6 Vpp, ± 0.8 V	_	Infiniium V, 90000X/Q 25 GHz models	
N2803A <sup>1, 2, 3</sup>	6:1	30 GHz	1.6 Vpp, ± 0.8 V		Infiniium 90000X/Q 28 GHz to 63 GHz models	

Order one or more probe heads. See page 15 for available InfiniiMax probe heads and accessories. 1.

2. 3. Not compatible with 1000, 2000X, 3000X/T, 4000X, 6000X, 5000, 6000, and 7000 Series oscilloscopes.

Not compatible with existing InfiniiMax I or II probe heads.

4. Compatible with InfiniiMax 1130B-34B only.



N2800A-03A InfiniiMax III probe amplifier



N5439A InfiniiMax III ZIF probe head soldered in to an IC



N5425B/26A high bandwidth ZIF solder-in probe head and tips for InfiniiMax probes



N5444A InfiniiMax III 2.92-mm SMA with N5448A SMA flex cable connected to a SMA connector on the board

### Differential active probes (Continued)

### InfiniiMode single-ended, differential and common-mode probes characteristics

Model	Attenuation	Probe bandwidth	Input dynamic range	Applications and use	Recommended oscilloscopes
N2750A	2:1 or 10:1	1.5 GHz	± 1 V Diff, 2 Vpp SE (at 2:1)/± 5 V Diff,	<ul> <li>Digital, analog design and power measurement</li> </ul>	InfiniiVision 3000 X/T, 4000 X, 6000 X, Infiniium 9000, S-Series
N2751A	2:1 or 10:1	3.5 GHz	10 Vpp SE (at 10:1)	<ul> <li>InfiniiMode probing for making</li> </ul>	6000 X, S-Series, 9000, 90000A
N2752A	2:1 or 10:1	6 GHz		<ul> <li>differential, single-ended and common mode measurements with a single probe</li> <li>Built-in quick action scope control for quick access to a variety of scope functions</li> <li>Comes with solder-in, socketed and browser tip standard</li> </ul>	6000 X, S-Series, 9000, 90000A



N2750A-02A InfiniiMode probe with standard accessories



InfiniiMode probe with either socketed tip or solder-in tip allows convenient measurements of differential, SE and CM signals with a single probe. Probe head light is built-in

### Differential active probes (Continued)

Active differential probe advantages	Limitations
View small signals in the presence of DC or other common mode signals	<ul> <li>More expensive than general-purpose passive probes</li> </ul>
	<ul> <li>Less dynamic range than using two passive probes</li> </ul>
N2790A helps you make safe and accurate high-speed floating	100-MHz bandwidth, must be used with 1-M $\Omega$ AutoProbe interface scope
measurements. AutoProbe interface supplies probe power	
N2791A/92A/93A and N2891A are low-cost differential probes that can be	25-, 200-, 800-, 70-MHz bandwidth
powered by USB port or by internal batteries	
N2818A/19A are the AutoProbe interface version of N2792A/93A	200-, 800-MHz bandwidth
1153A/1141A probes both low- and high-voltage differential signals with	200-MHz bandwidth
low-thermal drift	
1130B-34B, 1168B/69B and N2800A/01A/02A/03A InfiniiMax probe	Lower dynamic range and maximum input voltage (but has ultra-low input
probes both single-ended and differential signals up to 30-GHz bandwidth	capacitance)
N2750A/51A/52A InfiniiMode probes allow for making differential, single-	Supports browser, solder-in and socketed tip use models only, bandwidth is
ended and common mode measurements with a single probe.	limited with solder-in and socketed tip



1130B-34B, 1168B/69B InfiniiMax high-bandwidth differential probe and its probe head configurations



N2793A 800-MHz, 15-V differential probe with standard accessories



N2790A 100-MHz, 1.4-kV differential probe with standard accessories



N2791A 25-MHz, 700-V differential probe with standard accessories



N2792A 200-MHz, 20-V differential probe with standard accessories

#### Current probes

Current probes sense the current flowing through a conductor and convert it to a voltage that can be viewed and measured on an oscilloscope. Keysight current probes use a hybrid technology that includes a Hall-effect sensor, which senses the DC current, and a current transformer, which senses the AC current. Using split core construction, the current probe easily clips on and off of a conductor, making it unnecessary to make an electrical connection to the circuit. Measurement bandwidths from DC to 150 MHz are available. The new N7040A/41A/42A is a family of Rogowski AC current probe for measuring large AC current conveniently. These probes have a flexible clip-around sensor coil that can easily be wrapped around current carrying test points for measurement and can measure large current without increase in transducer size.



#### Current probe characteristics

Model	Probe type	Probe bandwidth	Max input current	Applications and use	Oscilloscope compatibility <sup>1</sup>
1146B	AC/DC current, 0.1 V/A (0-10 A peak) or 0.01 V/A (0-100 A peak)	100 kHz	100 A peak	<ul> <li>AC line, motors, automotive current measurement</li> <li>Requires 9-Vdc battery</li> </ul>	High-impedance BNC input
N2780B <sup>2</sup>	AC/DC current, 0.01 V/A	2 MHz	500 Arms continuous, 700 A peak non-continuous	Motors, switching power supplies, line currents	High-impedance BNC input
N2820A	AC/DC current, 2 ch, 300 V/A (zoom in) and 2 V/A (zoom out)	3 MHz (zoom out), 500 kHz (zoom in)	Max 5 A, min 50 μA (with supplied accessories)	Capturing and analyzing low-level current flow in the DUT to characterize sub-circuits or measure current consumption of battery- powered devices or integrated circuits	InfiniiVision 3000 X-, 4000 X-, 6000 X- and Infiniium S-Series, 9000 Series only (high impedance AutoProbe input)
N2821A	AC/DC current, 1 ch, 300 V/A (zoom in) and 2 V/A (zoom out)	3 MHz (zoom out), 500 kHz (zoom in)	Max 5 A, min 50 μA (with supplied accessories)	Capturing and analyzing low-level current flow in the DUT to characterize sub-circuits or measure current consumption of battery- powered devices or integrated circuits	InfiniiVision 3000 X-, 4000 X-, 6000 X- and Infiniium 9000, S-Series only (high impedance AutoProbe input)
N2781B <sup>2</sup>	AC/DC current, 0.01 V/A	10 MHz	150 Arms continuous, 300 A peak non-continuous	Motors, switching power supplies, transformers	High-impedance BNC input
N7040A	Rogowski AC current, 2 mV/A	3 Hz-23 MHz	3,000 Apeak	Motor, switching power supplies, double pulse tester current measurements	High-impedance BNC input
N7041A	Rogowski AC current, 10 mV/A	12 Hz-30 MHz	600 Apeak	Motor, switching power supplies, double pulse tester current measurements	High-impedance BNC input
N7042A	Rogowski AC current, 20 mV/A	9.2 Hz-30 MHz	300 Apeak	Motor, switching power supplies, double pulse tester current measurements	High-impedance BNC input
1147B <sup>3</sup>	AC/DC current, 0.1 V/A	50 MHz	15 A peak continuous, 30 A peak non-continuous	Motors, switching power supplies, magnetic-device current measurements	High-impedance AutoProbe input
N2782B <sup>2</sup>	AC/DC current, 0.1 V/A	50 MHz	30 Arms continuous, 50 A peak non-continuous	Switching power supplies, amplifiers, magnetic devices	High-impedance BNC input
N2783L <sup>2</sup>	AC/DC current, 0.1V/A, 5 m cable	80 MHz	30 Arms continuous, 50 A peak non-continuous	Automotive device measurement	High-impedance BNC input
N2893A <sup>3</sup>	AC/DC current, 0.1 V/A	100 MHz	15 A peak continuous,30 A peak non-continuous	Motor, switching power supplies, magnetic device current measurements	High-impedance AutoProbe input
N2783B <sup>2</sup>	AC/DC current, 0.1 V/A	100 MHz	30 Arms continuous, 50 A peak non-continuous	Switching power supplies, low current measurements	High-impedance BNC input
N7026A	AC/DC current, 1 V/A (high sensitivity)	150 MHz	30 Arms continuous, 40 A peak non-continuous	Motor, switching power supplies, magnetic device current measurements, high sensitivity current measurement (1 mA/div)	High-impedance AutoProbe input

To use the 1146B or N2780B Series current probe with Infiniium 80000, 90000, or 5485xA Series scope, order E2697A 1-MΩ high-impedance adapter.

2. 3.

Requires N2779A 3-channel power supply. Compatible with 3000X, 4000X, 6000X, 5000, 6000 (300 MHz to 1 GHz), 7000, 9000, S, V, 90000X/Q Series only. Use N5449A for use with 90000X/Q.

### Current probes (Continued)

Current probe advantages	Limitations
<ul> <li>1146B low-cost model measures AC and DC current to 100 Arms without breaking into the circuit</li> </ul>	– 100 kHz bandwidth
<ul> <li>Probe power is provided by the battery, so there is no need for an external power supply</li> </ul>	
- N2780B Series measures AC and DC current up to 500 A (N2780B) or 100 MHz (N2783B)	<ul> <li>Requires an external power supply</li> </ul>
<ul> <li>Compatible with any 1 MΩ BNC input</li> </ul>	(N2779A)
<ul> <li>– 1147B measures AC and DC current up to 50 MHz</li> </ul>	– Maximum 30 A peak (non-continuous)
<ul> <li>N2893A measures AC and DC current up to 100 MHz and provides auto-degaussing/offset elimination</li> </ul>	
<ul> <li>N7026A measures AC and DC current up to 150 MHz with 1mA/div sensitivity and provides</li> </ul>	
auto-degaussing/offset elimination	
<ul> <li>AutoProbe interface completely configures the oscilloscope for the probe</li> </ul>	
<ul> <li>N2820A/21A high-sensitivity current probe supports high-sensitivity AC/DC current</li> </ul>	<ul> <li>Using high sense resistor value causes more</li> </ul>
measurements from 50 $\mu A$ to 5 A	burden voltage (IR drop) in the DUT
<ul> <li>Simultaneous high- and low-gain views of the current waveform for more precise</li> </ul>	<ul> <li>Probe bandwidth is limited to 5 MHz</li> </ul>
wide-dynamic-range measurement	
<ul> <li>N7040A/41A/42A probes have a flexible clip-around sensor coil that can easily be wrapped</li> </ul>	<ul> <li>For AC current measurement only</li> </ul>
around current carrying test points for measurement	
– The Rogowski coil current probe can measure large current without increase in transducer size	



N2820A/21A high-sensitivity current probe (N2820A = 2 ch, N2821A = 1 ch)



1147B 50-MHz current probe with AutoProbe interface



N2893A 100-MHz current probe with AutoProbe interface



1146B 100-kHz current probe



N7040A 23 MHz, 3,000 Apk Rogowski coil AC current probe



N2780B Series current probes with N2779A power supply

### Optical-to-electrical converter

Optical-to-electrical converter transduces optical signals into electrical signals for convenient analysis on oscilloscope. The N7004A optical-to-electrical converter is designed for direct optical-to-electrical conversion of optical telecom or data com signals into the Infiniium realtime oscilloscope. When used with the Infiniium V- or Z-Series 33 GHz oscilloscope, the N7004A allows users to view optical streams at speeds up to 28 Gbps, making this the ideal solution for characterizing or troubleshooting high speed optical signals in the system level testing. The N7004A with the Infiniium realtime oscilloscope is an ideal solution for users who want to see the unfiltered response of the optical transmission as well.

- DC to 33 GHz typical (-3 dBe, electrical)
- Single-mode and multimode inputs
- 50/125  $\mu\text{m},$  750 to 1650 nm (covers main wavelengths: 850 nm, 1310 nm, and 1550 nm)
- Designed for reference receiver testing of industry optical standards or characterizing raw response of an optical transmitter
- Optical measurement features built into the Infiniium baseline software version 05.70 or higher
- Compatible with Infiniium V-Series, 90000 X-Series, Z-Series and discontinued 90000 Q-Series real-time oscilloscopes

### Optical and electrical characteristics and specifications

#### N7004A

33 GHz (with Brickwall filter)
22 GHz (with 4th order Bessel Thomson filter)
32 GHz (with Brickwall filter)
21.3 GHz (with 4th order Bessel Thomson filter)
DC
750 to 1650 nm
850 nm MM: –68 (min), –75 (typical)
1310 nm MM/SM: –105 (min), –110 (typical)
1550 nm SM: –105 (min), –110 (typical)
4 mW
8 mW
850 nm MM: –17 (typical), –15 (max) (fully-filled fiber)
1310 nm SM: –18.5 (typical), –16 (max)
1550 nm SM: –14 (typical)
FC/PC to 50/125 $\mu m$ fiber, compatible with single-mode or
multimode fiber
Optical measurements in watts, extinction ratio with dark
calibration, eye mask testing (including ability to load DCA masks
with margin and user defined mask support), power of 1 and 0,
optical modulation amplitude, average power, remote command
support for all new features
Infiniium software version 05.70 or higher



N7004A 33 GHz optical-to-electrical converter

### Other Oscilloscope Accessories

#### Probing accessories

Probe positione	Probe positioners				
N2784A	One-arm probe positioner (for browsing)	Compatible with most scope probes			
N2785A	Two-arm probe positioner (for browsing)	Compatible with most scope probes			
N2786A	Two-leg probe positioner	Compatible with most scope passive probes			
N2787A	3D probe positioner	Compatible with most Keysight probes including InfiniiMax browsers			

Refer to the Probe Positioners - Data Sheet, publication number 5989-9131EN, for probe compatibility details.

Mixed signal osc	illoscope logic probe	
N6459-60001	Logic probe with 1x8 flying leads (shipped with 2000 X-Series MSOs)	Compatible with 2000 X-Series MSOs
N6450-60001	Logic probe with 2x8 flying leads (shipped with 3000/4000 X-Series MSOs)	Compatible with 3000/4000 X-Series MSOs
N2756A	Logic probe with 16-channel flying leads (shipped with 6000 X-Series MSOs)	Compatible with 6000 X-Series MSOs
54620-68701	Logic probe with 2x8 flying leads (shipped with 6000/7000 Series MSOs)	Compatible with 6000/7000/54600 Series MSOs
10085-68701 <sup>1</sup>	40-pin logic probe and termination adapter	Compatible with 6000/7000/54600 Series MSOs
54826-68701	Logic probe kit for Infiniium MSOs (shipped with 8000 Series MSOs)	Compatible with 8000/54830 Series MSOs
E5396A	16-channel Soft Touch connectorless logic probe	Compatible with 6000/8000/54830 Series MSOs
54904-61615	Logic probe kit for Infiniium 9000 Series MSOs (shipped with 9000 Series MSOs)	Compatible with 9000 Series MSOs

1. With the addition of a 40-pin logic cable, the Keysight MSO accepts numerous logic analyzer accessories such as Mictor, Samtec, flying leads, or Soft touch connectorless probe.

#### Wedge probe adapter

- $-\,$  Easy connection to 0.5 or 0.65 mm TQFP and PQFP packages
- Reliable contact with little chance of shorting to adjacent pins
- 3-, 8-, and 16-signal versions

E2613A	IC pin spacing: 0.5 mm, 3-signal, qty 1
E2614A	IC pin spacing: 0.5 mm, 8-signal, qty 1
E2615A	IC pin spacing: 0.65 mm, 3-signal, qty 1
E2616A	IC pin spacing: 0.65 mm, 8-signal, qty 1
E2643A	IC pin spacing: 0.5 mm, 16-signal, qty 1
E2644A	IC pin spacing: 0.65 mm, 16-signal, qty 1

- Connects easily to most oscilloscopes or logic analyzers with appropriate accessories
- Connects directly to 1145A/1155A active probes and the dual-lead adapter provided with the 1160A-65A passive probe family and N2877A/N2879A accessory kits for N2870A Series passive probes



N2784A one-arm probe positioner



16-pin wedge adapter



E5396A half-size Soft Touch connectorless probe



N2786A 2-leg probe positioner and N2787A 3D probe positioner

### Probing accessories (Continued)

#### InfiniiMax 1130B/31B/32B/34B and InfiniiMax II 1168B/69B probe accessories

# Unrivaled InfiniiMax and InfiniiMax II probing accessories support browsing, solder-in, socket, and SMA use models at the maximum performance available

E26698       InfiniMax connectivity kit for single-ended measurements       Fully-compatible with 1130/2107/22/348         E26698       InfiniMax probe amplifier and compatible with       InfiniMax probe amplifier and compatible with         F26758       InfiniMax single-ended browser probe head and accessories (6-GHz BW)       InfiniMax ingle-ended browser probe head and accessories (6-GHz BW)         E26778       InfiniMax single-ended solder-in probe head and accessories (6-GHz BW)       InfiniMax single-ended solder-in probe head and accessories (6-GHz BW)         E26786       InfiniMax single-ended solder-in probe head and accessories (6-GHz BW)       InfiniMax ingle-ended solder-in probe head and accessories (6-GHz BW)         N54508       InfiniMax ingle-ended solder-in probe head and accessories (6-GHz BW)       InfiniMax ingle-ended solder-in probe head and 215 probe tos         N54508       InfiniMax ingle-ended solder-in probe head and accessories (12-GHz BW)       InfiniMax ingle-ended solder-in probe head and accessories (12-GHz BW)         N2880A       InfiniMax II differential Browser (12-GHz BW) - replaced E2695A       InfiniMax II differential solder-in probe head (12-GHz BW)       InfiniMax II InfiniMax II InfiniMax II         N2893A       InfiniMax II differential lorowser (12-GHz BW) - replaced E2695A       InfiniMax II differential solder-in probe head (12-GHz BW)       InfiniMax II MIX II All MIX II MIX III MIX II MIX III MIX I	performance avai	lable	
E26758       InfiniMax differential browser probe head and accessories (6-GHz BW)       I1688/698 InfiniMax III probe amplifier with limitations         E26768       InfiniMax differential socketed probe head and accessories (2-GHz BW)       Iimitations         E26778       InfiniMax single-ended/differential socketed probe head and accessories (2-GHz BW)       Iimitations         E26788       InfiniMax single-ended/differential socketed probe head and accessories (2-GHz BW)       Iimitations         N54526       12-GHz BW)       Iimitations       Iimitations         N54526       12-GHz BW)       Iimitations       Iimitations         N54526       InfiniMax III protectips (for use with N54250 ZIF probe head)       Iimitations       Iimitations         N54526       InfiniMax III protectips (for use with N54250 ZIF probe head)       Iimitations       Iimitations         N2880A       InfiniMax III differential solder-in probe head and accessories (12-GHz BW)       Recommended for use with InfiniMax II         N2881A       InfiniMax II differential solder-in probe head and accessories (12-GHz BW)       - Recommended for use with InfiniMax II         N2894A       InfiniMax II differential solder-in probe head (12-GHz BW)       - Order NX0102A Soldering tool kit for MX0100A         NX0100A       MX0100A InfiniMax III micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, order MX0100A, order MX0100A, order MX0100A, order NX0100A, or	E2669B	InfiniiMax connectivity kit for differential/single-ended measurements	Fully-compatible with 1130B/31B/32B/34B
E26768       InfiniiMax single-ended browser probe head and accessories (6-GH2 BW)       Imitiations         E26778       InfiniiMax single-ended/differential socketed probe head and accessories (12-GH2 BW)       E26798         E26798       InfiniiMax single-ended solder-in probe head and accessories (6-GH2 BW)       E26798         P54258/N5426A       12-GHz BW)       E26798         E26798       InfiniiMax single-ended solder-in probe head and ZIF probe tips       E26798         N5451A       InfiniiMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)       E26798         N5452B       InfiniiMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)       E26798         N5450B       InfiniiMax ling extreme temperature extension cable (allows for probing in temperatures ranging from -55 to 150° CO       E26995A         N2884A       InfiniiMax II differential Solder-in probe head and accessories (12-GHz BW)       E26798         N5380B       InfiniiMax II differential browser (12-GHz BW) - replaced E2695A       - Recommended for use with InfiniiMax II         N58451A       InfiniiMax II differential browser (12-GHz BW) - replaced N5382A       - Order N2837A replacement tip kit for N2839A         N2839A       InfiniiMax II differential browser (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A         N2851A       InfiniiMax II cuickTip probe head (12-GHz BW)       - Order N2837A replacement tip kit for N2839A	E2668B	InfiniiMax connectivity kit for single-ended measurements	InfiniiMax probe amplifier and compatible with
E26778       InfiniiMax differential solder-in probe head and accessories (12-GHz BW)         E26788       InfiniiMax single-ended/differential socketed probe head and accessories (12-GHz BW)         E26798       InfiniiMax single-ended/differential socketed probe head and accessories (6-GHz BW)         N54258/N5426A       12-GHz differential 2/F solder-in probe head and 2/F probe tips         N5450B       InfiniiMax curreme temperature extension cable (allows for probing in temperatures ranging from -55 to 150 °C)         N2880A       InfiniiMax fine-wire probe tips of 0.12, and 20 dB attenuators in a kit)         N2881A       InfiniiMax fine-wire probe tips for wafer probing         N5380B       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Recommended for use with InfiniiMax II         N289A       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2839A         N530B       InfiniiMax II differential solder-in probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A         NX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, or For additional bullet adapter for MX0100A, or Forer additional bullet adapter for MX0100A, or For addit	E2675B	InfiniiMax differential browser probe head and accessories (6-GHz BW)	1168B/69B InfiniiMax II probe amplifier with
E2678B       InfiniiMax single-ended/differential socketed probe head and accessories (G-GHz BW)         E2679B       InfiniiMax single-ended solder-in probe head and accessories (G-GHz BW)         N5450A       12-GHz differential ZIF solder-in probe head and ZIF probe tips         N5451A       InfiniiMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)         N5450B       InfiniiMax entreme temperature extension cable (allows for probing in temperatures) and the temperature sold pairs of 6, 12, and 20 dB attenuators in a kit)         N2881A       InfiniiMax DC blocking caps (a pair of 30-Vdc blocking caps)         N2881A       InfiniiMax II differential SMA adapter (12-GHz BW) - replaced E2695A         N5830B       InfiniiMax II differential solder-in probe head (12-GHz BW)         N2883A       InfiniiMax II differential solder-in probe head (12-GHz BW)         N2830A       InfiniiMax II micro probe head (12-GHz BW)         N2851A       InfiniiMax II micro probe head (12-GHz BW)         N2851A       InfiniiMax II quickTip probe head (for InfiniiMax I/II)         Order NX0102A Soldering tool kit for MX0100A         N2851A       InfiniiMax II quickTip probe head (for InfiniiMax I/II)         Order NX0102A       Prode tadget of 4 GHz)         N2853A       InfiniiMax II QuickTip probe head (for InfiniiMax I/II)       Order N2849A QuickTip tips (set of 4)         N28545A       InfiniiMax III N2800A/01A/02A/03A ad	E2676B	InfiniiMax single-ended browser probe head and accessories (6-GHz BW)	limitations
(12-GHz BW)       (12-GHz BW)         E2679B       Infinilwas single-ended solder-in probe head and ZIF probe tips         N5425B/N5426A       12-GHz differential ZIF solder-in probe head and ZIF probe tips         N545B/N5426A       Infinilwas verteme temperature extension cable (allows for probing in temperatures ranging from -55 to 150 °C)         N2880A       Infinilwas in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2880A       Infinilwas in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2880A       Infinilwas in differential SMA adapter (12-GHz BW) - replaced E2695A       - Recommended for use with InfinilWas II         N5380B       Infinilwas II differential SMA adapter (12-GHz BW) - replaced N5382A       - Order N2837A replacement tip kit for N28394         NX0100A       MX0100A Infinilwas II differential browser (12-GHz BW) - replaced N5382A       - Order MX0102A Soldering tool kit for MX0100A, order MX0100A, Infinilwas II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, order MX0100A, order MX0100A, order MX0100A, Soldering tool kit for MX0100A         N2897A       Infinilwas XII unicro probe interface adapter (4 GHz)       - For additional bullet adapter for MX0100A, order MX0100A, order MX0100A, order MX0100A, order MX0100A         N2893A       Infinilwas XII differential probe kit       - For additional bullet adapter for MX0100A, order MX0100A, order MX0103A         N28951A       InfiniliMax III M280A/31A/32A, N7000A/01A/02A/03A pr	E2677B	InfiniiMax differential solder-in probe head and accessories (12-GHz BW)	
N5425B/N5426A       12-GHz differential ZIF solder-in probe head and ZIF probe tips         N5451A       InfiniiMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)         N5450B       InfiniiMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)         N2890A       InfiniiMax in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2891A       InfiniiMax In-wire probe tips for wafer probing         N5380B       InfiniiMax II differential SMA adapter (12-GHz BW) - replaced E2695A       - Recommended for use with InfiniiMax II         N5380B       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2839A         N100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order N2817A replacement tip kit for N2839A         N2883A       InfiniiMax II QuickTip probe head (12-GHz BW)       - Order N2819A QuickTip tips (set of 4)         N2883A       InfiniiMax II QuickTip probe head (for InfiniiMax IVII)       Order N2849A QuickTip tips (set of 4)         N2883A       InfiniiMax Soft touch half-channel probe interface adapter (4 GHz)       Order N5476 A for replacement probe tips (set of 4)         N2883A       InfiniiMax III browser head (28 GHz)       Order N5476 A for replacement probe tips (set of 4)         N2883A       InfiniiMax III browser head (28 GHz)       Order N54876 A for replacement robe tips (set of 4)         N5433A	E2678B		_
N5451A       InfinilMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)         N5450B       InfinilMax extreme temperature extension cable (allows for probing in temperatures ranging from -55 to 150 °C)         N2880A       InfinilMax In-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2881A       InfinilMax IDE blocking caps (a pair of 30-Vdc blocking caps)         N2884A       InfinilMax II differential SMA adapter (12-GHz BW) - replaced E2695A       - Recommended for use with InfinilMax II         N5381B       InfinilMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2839A         NX0100A       MX0100A InfinilMax II micro probe head (12-GHz BW)       - Order N2012A Soldering tool kit for MX0100A, order MX0102A Soldering tool kit for MX0100A, order MX0102A Soldering tool kit for MX0100A, order MX0102A Soldering tool kit for MX0100A, order MX0103A         N2851A       InfinilMax II QuickTip probe head (for InfinilMax I/II)       Order N2849A QuickTip tips (set of 4)         N2883A       InfinilMax Soft touch half-channel probe interface adapter (4 GHz)       N2833A         N2833A       InfinilMax III browser head (30 GHz)       Order N2849A Cboord ZIF (450 Q), N5440A         N5439A       InfinilMax III extreme temperature solder-in head (26-GHz BW)       Order N28347A Cboord ZIF (450 Q), N5440A         N5445A       InfinilMax III extreme temperature solder-in head (26-GHz BW)       Order N28346 Cboord ZIF (450 Q), N5	E2679B	InfiniiMax single-ended solder-in probe head and accessories (6-GHz BW)	
N5451A       InfinilMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)         N5450B       InfinilMax extreme temperature extension cable (allows for probing in temperatures ranging from -55 to 150 °C)         N2880A       InfinilMax in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2881A       InfinilMax in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2884A       InfinilMax in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N5380B       InfinilMax ill differential SMA adapter (12-GHz BW) - replaced E2695A       - Recommended for use with InfinilMax II         N5381B       InfinilMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2839A         NX0100A       MX0100A InfinilMax III micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, order MX0102A, Soldering tool kit for MX0100A         N2851A       InfinilMax II QuickTip probe head (for InfinilMax I/II)       Order MX0102A         N2853A       InfinilMax Soft touch Pro probe interface adapter (4 GHz)         N2883A       InfinilMax III differential probe kit         InfinilMax III Browser head (30 GHz)       Order N2849A QuickTip tips (set of 4)         N5439A       InfinilMax III extreme temperature solder-in head (26-GHz BW)       Order N2847A Ceramic ZIF (450 0), N5440A Ceramic ZIF	N5425B/N5426A	12-GHz differential ZIF solder-in probe head and ZIF probe tips	
temperatures ranging from -55 to 150 °C)         N2880A       InfiniiMax in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)         N2881A       InfiniiMax DC blocking caps (a pair of 30-Vdc blocking caps)         N2884A       InfiniiMax fine-wire probe tips for probe tips for probe tips (or probe tips (or probe tips (set of 4))         N5380B       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Recommended for use with InfiniiMax II         N5381B       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N28394         NX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, order MX0103A         N2851A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - For additional bullet adapter for MX0100A, order MX0103A         N2857A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - N2837A         N2833A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - N2833A         N2833A       InfiniiMax III differential probe kit       - Order N2839A Probe accessories         N5445A       InfiniiMax III browser head (30 GHz)       Order N2836 APC board ZIF (450 Q), N5440A Ceramic ZIF	N5451A	InfiniiMax long-wire ZIF probe tips (for use with N5425B ZIF probe head)	
N2881A       InfiniiMax DC blocking caps (a pair of 30-Vdc blocking caps)         N2884A       InfiniiMax fine-wire probe tips for wafer probing         N5380B       InfiniiMax II differential Solder-in probe head and accessories (12-GHz BW)       - Recommended for use with InfiniiMax II         N2839A       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2839A         MX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A         N2851A       InfiniiMax II quickTip probe head (for InfiniiMax I/II)       Order N2849A QuickTip tips (set of 4)         N2857A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - For additional bullet adapter for MX0100A, order MX0103A         N2857A       InfiniiMax II differential probe kit       - Order N2849A QuickTip tips (set of 4)         N2833A       InfiniiMax III differential probe kit       - Order N2838A Probacesories         N5445A       InfiniiMax III Probe head (28 GHz)       Order N5476A for replacement probe tips (set of 4)         N5439A       InfiniiMax III 21 probe head (28 GHz)       Order N2836-68701 for replacement resistor tip         N5444A       InfiniiMax III 2.92 mm/SMA probe head (30 GHz)       Order N2836-68701 for replacement resistor tip         N5444A       InfiniiMax III 2.92 mm/SMA probe head (26 GHz)       Order N2836-68701 for replacement resist	N5450B		_
N2884A       InfiniiMax fine-wire probe tips for wafer probing         N5380B       InfiniiMax II differential SMA adapter (12-GHz BW) - replaced E2695A       - Recommended for use with InfiniiMax II         N5381B       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2839A         NX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order N2837A replacement tip kit for N2837A         MX0100A       MX0100A InfiniiMax II micro probe head (for InfiniiMax I/II)       - Order N2849A QuickTip tips (set of 4)         N2887A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - For additional bullet adapter for MX0100A, order MX0103A         N2887A       InfiniiMax Soft touch half-channel probe hiterface adapter (4 GHz)       - Order N2849A QuickTip tips (set of 4)         N2833A       InfiniiMax III probe head (28 GHz)       Order N2838A PC board ZIF (450 Q), N5440A         Ceramic ZIF (450 Q) or N5447A Ceramic ZIF (450 Q) or N5448B (25 cm) or N2823A (1m) 2.92 mm (m) cables to extend the cable length         N5444A       InfiniiMax III solder-in probe head (26 GHz)       Order N2849A QuickTip tips (set of 4)         N5444A       InfiniiMax III solder-in probe head (26 GHz)       Order N2836-68701 for replacement resistor tip (m) - 0-2.92 mm (m) cables to extend the cable length         N2836A       InfiniiMax III solder-in probe he	N2880A	InfiniiMax in-line attenuator kit (pairs of 6, 12, and 20 dB attenuators in a kit)	
N2884A       InfiniiMax fine-wire probe tips for wafer probing         N5380B       InfiniiMax II differential SMA adapter (12-GHz BW) - replaced E2695A       - Recommended for use with InfiniiMax II         N5381B       InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)       - Order N2837A replacement tip kit for N2837A         N2839A       InfiniiMax II differential browser (12-GHz BW) - replaced N5382A       - Order N2837A replacement tip kit for N2837A         MX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, order MX0103A         N2851A       InfiniiMax II QuickTip probe head (for InfiniiMax I/II)       Order N2849A QuickTip tips (set of 4)         N2887A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - For additional bullet adapter for MX0100A, order MX0103A         N2833A       InfiniiMax III differential probe kit       - Order N2849A QuickTip tips (set of 4)         N2833A       InfiniiMax III Probe head (28 GHz)       Order N2838A PC board 2IF (450 Q), N5440A         Ceramic ZIF (450 Q) for a set of 5 ZIF tips with plastic sporks       - Order N2836-68701 for replacement resistor tip         N5444A       InfiniiMax III 2.92 mm/SMA probe head (30 GHz)       Order N2836-68701 for replacement resistor tip         N5444A       InfiniiMax III solder-in probe head (26 GHz)       Order N2836-68701 for replacement resistor tip         N2836A       Infini	N2881A	InfiniiMax DC blocking caps (a pair of 30-Vdc blocking caps)	
N5381BInfiniiMax II differential solder-in probe head and accessories (12-GHz BW)1168B/69B probe amplifierN2839AInfiniiMax II differential browser (12-GHz BW) - replaced N5382A- Order N2837A replacement tip kit for N2839A browserMX0100AMX0100A InfiniiMax II micro probe head (12-GHz BW)- Order MX0102A Soldering tool kit for MX0100A - For additional bullet adapter for MX0100A, order MX0103AN2851AInfiniiMax II QuickTip probe head (for InfiniiMax I/II)Order N2849A QuickTip tips (set of 4)N2887AInfiniiMax Soft touch Pro probe interface adapter (4 GHz)-N2833AInfiniiMax Soft touch half-channel probe interface adapter (4 GHz)-N2833AInfiniiMax III differential probe kit-InfiniiMax III N2800A/01A/02A/03A and InfiniiMax III+ N2830A/31A/32A, N7000A/01A/02A/03A probe accessories-N5445AInfiniiMax III browser head (30 GHz)Order N5476A for replacement probe tips (set of 4)N5439AInfiniiMax III zip probe head (28 GHz)Order N2836A Ceramic ZIF (450 Q), N5440A Ceramic ZIF (200 Q) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable lengthN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2849A QuickTip tips (set of 4)	N2884A		
N2839A       InfiniiMax II differential browser (12-GHz BW) - replaced N5382A       - Order N2837A replacement tip kit for N2839A browser         MX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A, order MX0100A         N2851A       InfiniiMax II QuickTip probe head (for InfiniiMax I/II)       Order N2849A QuickTip tips (set of 4)         N2887A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       - Order N2837A replacement probe tips (set of 4)         N2883A       InfiniiMax Soft touch half-channel probe interface adapter (4 GHz)       - Order N2649A QuickTip tips (set of 4)         N2833A       InfiniiMax III differential probe kit       - Order N2838A Probe accessories         N5445A       InfiniiMax III browser head (30 GHz)       Order N2838A PC board ZIF (450 Ω), N5440A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporks         MX0109A       InfiniiMax III extreme temperature solder-in head (26-GHz BW)       Order N2836-68701 for replacement resistor tip (m)-to-2.92 mm	N5380B	InfiniiMax II differential SMA adapter (12-GHz BW) - replaced E2695A	<ul> <li>Recommended for use with InfiniiMax II</li> </ul>
MX0100A       MX0100A InfiniiMax II micro probe head (12-GHz BW)       - Order MX0102A Soldering tool kit for MX0100A         -       For additional bullet adapter for MX0100A, order MX0103A         N2851A       InfiniiMax II QuickTip probe head (for InfiniiMax I/II)       Order N2849A QuickTip tips (set of 4)         N2887A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)       N2883A         N2833A       InfiniiMax Soft touch half-channel probe interface adapter (4 GHz)       N2833A         N2833A       InfiniiMax III differential probe kit       Order N2849A QuickTip tips (set of 4)         N5445A       InfiniiMax III browser head (30 GHz)       Order N2838A PC board ZIF (450 Ω), N5440A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporks         MX0109A       InfiniiMax III extreme temperature solder-in head (26-GHz BW)       Order N2836-68701 for replacement resistor tip (m)-to-2.92 mm (m) cables to extend the cable length         N2836A       InfiniiMax III solder-in probe head (26 GHz)       Order N2836-68701 for replacement resistor tip N2848A	N5381B	InfiniiMax II differential solder-in probe head and accessories (12-GHz BW)	1168B/69B probe amplifier
MX0100A       - For additional bullet adapter for MX0100A, order MX0103A         N2851A       InfiniiMax II QuickTip probe head (for InfiniiMax I/II)       Order N2849A QuickTip tips (set of 4)         N2887A       InfiniiMax Soft touch Pro probe interface adapter (4 GHz)	N2839A	InfiniiMax II differential browser (12-GHz BW) - replaced N5382A	<ul> <li>Order N2837A replacement tip kit for N2839A browser</li> </ul>
N2887AInfiniiMax Soft touch Pro probe interface adapter (4 GHz)N2888AInfiniiMax Soft touch half-channel probe interface adapter (4 GHz)N2833AInfiniiMax III differential probe kitInfiniiMax III N2800A/01A/02A/03A and InfiniiMax III+ N2830A/31A/32A, N7000A/01A/02A/03A probe accessoriesN5445AInfiniiMax III browser head (30 GHz)N5439AInfiniiMax III browser head (28 GHz)Order N2838A PC board ZIF (450 Ω), N5440ACeramic ZIF (450 Ω) or N5447A Ceramic ZIF(200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)N5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)N2836AInfiniiMax III solder-in probe head (26 GHz)N2836AInfiniiMax III solder-in probe head (26 GHz)N2848AInfiniiMax III QuickTip probe head (26 GHz)N2848AInfiniiMax III QuickTip probe head (for InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)	MX0100A	MX0100A InfiniiMax II micro probe head (12-GHz BW)	MX0100A – For additional bullet adapter for MX0100A,
N2888AInfiniiMax Soft touch half-channel probe interface adapter (4 GHz)N2833AInfiniiMax II differential probe kitInfiniiMax III N2800A/01A/02A/03A and InfiniiMax III+ N2830A/31A/32A, N7000A/01A/02A/03A probe accessoriesN5445AInfiniiMax III browser head (30 GHz)Order N5476A for replacement probe tips (set of 4N5439AInfiniiMax III ZIF probe head (28 GHz)Order N2838A PC board ZIF (450 Ω), N5440ACeramic ZIF (450 Ω) or N5447A Ceramic ZIF(200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)N5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)N2836AInfiniiMax III solder-in probe head (26 GHz)N2836AInfiniiMax III solder-in probe head (26 GHz)N2848AInfiniiMax III QuickTip probe head (26 GHz)N2848AInfiniiMax III QuickTip probe head (60 InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)	N2851A	InfiniiMax II QuickTip probe head (for InfiniiMax I/II)	Order N2849A QuickTip tips (set of 4)
N2833AInfiniiMax II differential probe kitInfiniiMax III N2800A/01A/02A/03A and InfiniiMax III+ N2830A/31A/32A, N7000A/01A/02A/03A probe accessoriesN5445AInfiniiMax III browser head (30 GHz)Order N5476A for replacement probe tips (set of 4N5439AInfiniiMax III ZIF probe head (28 GHz)Order N2838A PC board ZIF (450 Ω), N5440A Ceramic ZIF (450 Ω) or N5447A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)Order N2836-68701 for replacement resistor tipN5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable lengthN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2848AInfiniiMax III QuickTip probe head (for InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)	N2887A	InfiniiMax Soft touch Pro probe interface adapter (4 GHz)	
InfiniiMax III N2800A/01A/02A/03A and InfiniiMax III+ N2830A/31A/32A, N7000A/01A/02A/03AN5445AInfiniiMax III browser head (30 GHz)Order N5476A for replacement probe tips (set of 4N5439AInfiniiMax III ZIF probe head (28 GHz)Order N2838A PC board ZIF (450 Ω), N5440A Ceramic ZIF (450 Ω) or N5447A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26 GHz BW)Order N2836-68701 for replacement resistor tipN5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable lengthN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2848AInfiniiMax III QuickTip probe head (for InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)	N2888A	InfiniiMax Soft touch half-channel probe interface adapter (4 GHz)	
N5445AInfiniiMax III browser head (30 GHz)Order N5476A for replacement probe tips (set of 4N5439AInfiniiMax III ZIF probe head (28 GHz)Order N2838A PC board ZIF (450 Ω), N5440A Ceramic ZIF (450 Ω) or N5447A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)Order N2836-68701 for replacement resistor tipN5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable lengthN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2848AInfiniiMax III QuickTip probe head (for InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)	N2833A	InfiniiMax II differential probe kit	
N5439AInfiniiMax III ZIF probe head (28 GHz)Order N2838A PC board ZIF (450 Ω), N5440A Ceramic ZIF (450 Ω) or N5447A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)Order N2836-68701 for replacement resistor tipN5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable lengthN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2848AInfiniiMax III QuickTip probe head (for InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)			
MX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)Ceramic ZIF (450 Ω) or N5447A Ceramic ZIF (200 Ω) for a set of 5 ZIF tips with plastic sporksMX0109AInfiniiMax III extreme temperature solder-in head (26-GHz BW)Order N2836-68701 for replacement resistor tipN5444AInfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable lengthN2836AInfiniiMax III solder-in probe head (26 GHz)Order N2836-68701 for replacement resistor tipN2848AInfiniiMax III QuickTip probe head (for InfiniiMax III/III+)Order N2849A QuickTip tips (set of 4)			
N5444A       InfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)       Order N5448B (25 cm) or N2823A (1 m) 2.92 mm (m)-to-2.92 mm (m) cables to extend the cable length         N2836A       InfiniiMax III solder-in probe head (26 GHz)       Order N2836-68701 for replacement resistor tip         N2848A       InfiniiMax III QuickTip probe head (for InfiniiMax III/III+)       Order N2849A QuickTip tips (set of 4)	N5439A	InfiniiMax III ZIF probe head (28 GHz)	Ceramic ZIF (450 $\Omega)$ or N5447A Ceramic ZIF
M2836A     InfiniiMax III solder-in probe head (26 GHz)     Order N2836-68701 for replacement resistor tip       N2848A     InfiniiMax III QuickTip probe head (for InfiniiMax III/III+)     Order N2849A QuickTip tips (set of 4)	MX0109A	InfiniiMax III extreme temperature solder-in head (26-GHz BW)	Order N2836-68701 for replacement resistor tip
N2848A InfiniiMax III QuickTip probe head (for InfiniiMax III/III+) Order N2849A QuickTip tips (set of 4)	N5444A	InfiniiMax III 2.92 mm/3.5 mm/SMA probe head (30 GHz)	(m)-to-2.92 mm (m) cables to extend the cable
	N2836A	InfiniiMax III solder-in probe head (26 GHz)	Order N2836-68701 for replacement resistor tip
N2835A InfiniiMax III differential probe kit	N2848A	InfiniiMax III QuickTip probe head (for InfiniiMax III/III+)	Order N2849A QuickTip tips (set of 4)
	N2835A	InfiniiMax III differential probe kit	

# Other Oscilloscope Accessories (Continued)

### Probing accessories (Continued)

IC clip kit		
10075A	0.5 mm IC clip kit	For 10070 Series passive probes
Ducho coccos		
Probe accesso	•	F 10070.0 ' ' I
10072A	SMT probe accessory kit	For 10070 Series passive probes
10077A	Accessory kit for 10076A/B/C high voltage probe	For 10076A/B/C
N2877A	Deluxe accessory kit	For N2870A Series passive probes
N2878A	General purpose accessory kit	For N2870A Series passive probes
N2879A	Fine-pitch accessory kit	For N2870A Series passive probes
PC hoard mini	-probe sockets	
N2766A	Horizontal mini-probe socket, gty 25	Compatible with 1160A-65A and 104xxB passive probes
N2768A	Vertical mini-probe socket, gty 25	Compatible with 1160A-65A and 104xxB passive probes
N2885A	PCB adapter kit, gty 25	For N2870A Series passive probes
N4827A	PCB socket adapter	N2862B/63B/89A/90A passive probes
N4863A	Probe tip to PCB adapter, horizontal	N2870A-76A, N2894A
N4864A	Probe tip to PCB adapter, vertical	N2870A-76A, N2894A
1140047		N2070A-70A, N2034A
Probe interfac	e adapters	
E2697A	1-MΩ high-impedance adapter (includes one 10073C 500-MHz passive probe)	Compatible with Infiniium oscilloscope's 50- $\Omega$ input with AutoProbe I interface
N5449A	High impedance probe adapter (includes one	For use with high impedance passive or active probes and Infiniium scope with
	N2873A 500-MHz passive probe)	AutoProbe II interface
N5442A	Precision BNC 50- $\Omega$ adapter	For use with InfiniiMax I, II, III+ (N2830A-32A), N2795A-97A, N2750A-52A
		active probes with AutoProbe I interface and with Infiniium with AutoProbe II
		interface
N1022B	Sampling oscilloscope adapter	For use with InfiniiMax I and II probes with Keysight 86100C DCA-j sampling oscilloscope
N5477A	Sampling oscilloscope adapter	For use with InfiniiMax III probe and Keysight 86100C DCA-J sampling oscilloscope
N2744A	T2A probe interface adapter	Enables TekProbe BNC probes to connect to Keysight's AutoProbe interface
BNC Adapter		
N2882A	75 $\Omega$ (f) to 50 $\Omega$ (m) BNC adapter	Compatible with any oscilloscope's 50- $\Omega$ BNC input
INZOOZA	7 5 52 (1) to 50 52 (11) bive adapter	כטוויףמנוטני אינוו מוץ טיטנוונטגנטף א גייט דע דויףענ
Probe deskew	fivtures	
I TODE DESKEW	IIXLUI 65	

#### Probe deskew fixtures

E2655C	Probe deskew and performance verification kit for InfiniiMax I/II/III+ probes
U1880A	Power measurement deskew fixture
MX0104A	Probe deskew and performance verification fixture for InfiniiMax III/III+ probes



InfiniiMax probe with N5450B extreme temperature extension cable



N2880A InfiniiMax in-line attenuator (probe amplifier and head not included)



N2848A QuickTip head with N2849A QuickTip tips

### Other Oscilloscope Accessories (Continued)

### Probing accessories (Continued)

N2776A	Differential browser tips (qty 3)	For N2750A/51A/52A InfiniiMode probes
N2777A	InfiniiMode solder-in tips (qty 3)	For N2750A/51A/52A InfiniiMode probes
N2778A	InfiniiMode socketed tips (qty 3)	For N2750A/51A/52A InfiniiMode probes
N4822A	Socketed tip for USB/Ethernet application fixtures (qty 1)	For N2750A/51A/52A InfiniiMode probes
N2820A/21A	high-sensitivity current probe accessories	
N2822A	20-mΩ resistor tips	For N2820A/21A current probe
N2824A	100-mΩ resistor tips	For N2820A/21A current probe
N2825A	User-defined resistor tips	For N2820A/21A current probe
N2826A	Replacement wires (15.5 cm, 22 AWG bare wires) (qty 5)	For N2820A/21A current probe
N2827A	Passive cable (for N2820A secondary channel)	For N2820A/21A current probe
N2828A	Replacement MBB (make-before-break) headers (qty 5)	For N2820A/21A current probe
N2829A	Replacement MBB (make-before-break) receptacles and 15.5 cm,	For N2820A/21A current probe
	AWG 22 socketed wires (qty 5 each)	
N2828A N2829A	Replacement MBB (make-before-break) receptacles and 15.5 cm,	
N7020A/24A	power rail probe accessories	
N7021A	Coaxial pigtail probe head (qty 3)	
N7022A	SMA cable, 48"	
NIZ000A	Drowpor kit	

N7023A	Browser kit
N7032A	4 GHz browser for 0603 and 0805 SMD packages (inch code)
N7033A	5 GHz browser for 0201 and 0402 packages (inch code)



N2885A PCB adapter kit for N2870A Series passive probes (probe not included)



Use the N2744A T2A interface adapter to use Tektronix active probes with Keysight scopes



IC clips included in N2877A and N2878A accessory kits for N2870A Series passive probes

### Related Literature

Publication title	Publication number
Infiniium Oscilloscope Probes and Accessories - Data Sheet	5968-7141EN
InfiniiVision Oscilloscope Probes and Accessories - Selection Guide	5968-8153EN
Probes and Accessories for Keysight Oscilloscopes - Selection Guide	5989-8433EN

### Product Web Site

For the most up-to-date and complete application and product information, please visit our product Web site at: www.keysight.com/find/probes



# Keysight Oscilloscopes

Multiple form factors from 20 MHz to > 90 GHz | Industry leading specs | Powerful applications

### Learn more at: www.keysight.com

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

